

# DRIVER ID & DATA KEY INSTRUCTIONS

## Immobilization or Buzzer Alarm Enabled.

Please follow these simple instructions for the day to day operation of your Driver ID Key.

**IT IS IMPORTANT THAT YOU INSERT THE DRIVER KEY INTO THE TOUCH KEY HOUSING, PRIOR TO STARTING THE VEHICLE. THIS WILL DEACTIVATE THE INTERNAL PIEZO ALARM SITUATED WITHIN THE VEHICLE.**



IVMS Driver Key

With the vehicle ignition OFF insert your "Driver ID & Data Key" into the touch key housing located on the vehicle dashboard.

You will hear a SINGLE tone that confirms that your Driver ID key has been accepted and recognized.

Once you hear the confirmation tone, REMOVE the key from the "Touch Key Housing".



Touch Key Housing

**DO NOT LEAVE THE DRIVER KEY IN THE TOUCH KEY HOUSING WHEN OPERATING THE VEHICLE.**



For further assistance contact:

Securatrak Support Team  
79 Belair Road  
KINGSWOOD SA 5062

Phone: 08 83728999

Fax: 08 83728900

Email: [helpdesk@securatrak.com.au](mailto:helpdesk@securatrak.com.au)